



TR-4C INSTRUCTION MANUAL	PAG. 05-02	§ 5.9	30 minutes
9.0 MHz OSCILLATOR	S/N	Date	Tech

## 5-9. 9.0 MHz OSCILLATOR.

- Let the TR-4C warm up for 30 minutes.
- Set the Mode switch in the SSB position.
- Turn up the Audio Gain control until noise is audible in the speaker.
- While switching the SIDE BAND knob back and forth, adjust C130, located on top of the chassis near the rear edge, until the pitch of the noise is the same on both positions.

## 5-9 OSCILLATORE A 9 MHz

- Lasciare scaldare il TR-4C per 30 minuti.
- Posizionare il commutatore MODE nella posizione SSB.
- Girare il comando Audio Gain fino ad ascoltare del rumore in altoparlante.
- Mentre si commuta il selettore SIDE BAND alternativamente tra le due bande laterali, regolare il C130 situato nella parte superiore del telaio vicino al bordo posteriore fino a che il tono del rumore è identico in entrambe le posizioni.

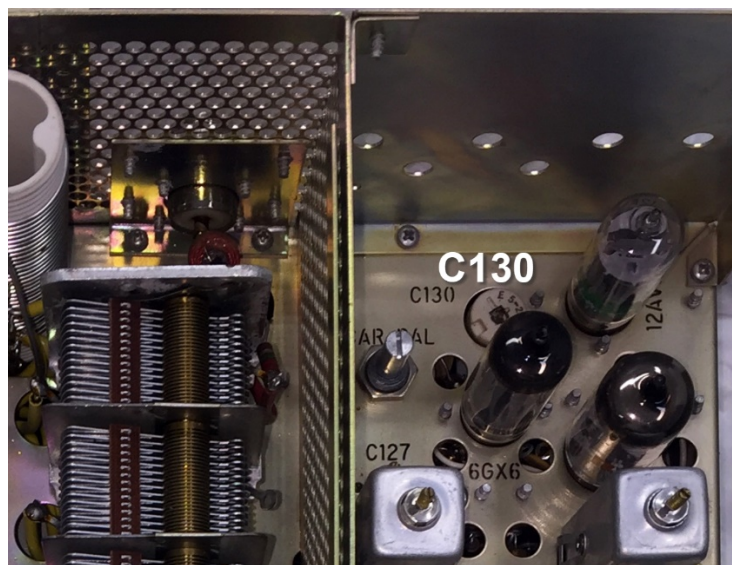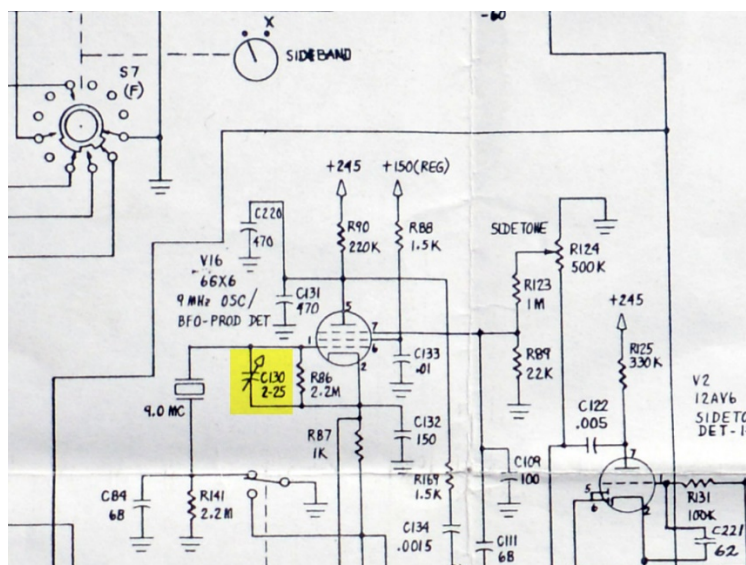

## TARATURA SECONDO IN3HDZ – IN3MOD

- Lasciare scaldare il TR-4C per 30 minuti.
- Posizionare il commutatore MODE nella posizione SSB.
- Girare il comando Audio Gain fino ad ascoltare del rumore in altoparlante.
- Mentre si commuta il selettore SIDE BAND alternativamente tra le due bande laterali, regolare il C130 situato nella parte superiore del telaio vicino al bordo posteriore fino a che il tono del rumore è identico in entrambe le posizioni.